



Shoreline Industries

Sidewinder™

Remote Control Instructions

REMOTE CONTROL

Your system is equipped with an electronic remote control receiver box and two hand-held remote controls (key fobs). The two remotes and receiver box are uniquely programmed to operate as a system. As a result of this unique programming, your two remotes are the only units that can communicate with your receiver. This feature provides you the security that only the person possessing the remotes can operate your boatlift remotely.



Do not operate the Sidewinder™ with the remote and manual switch at the same time!!

Remote Control Maintenance: When the **battery expires you will need to replace it.** The remote is watertight but is **not** intended to be submerged. If the remote does get submerged the best thing to do is to replace it.



If you try to use the remote control after it has been submerged the remote can short out and cause the Sidewinder™ to unexpectedly operate.

It is **possible for the transmitter to de-program either due to loss of power (dead battery) or electrical interference.** First check to see that it is transmitting. Do this by depressing any button and watching to see that the transmitter LED lights up. If not, change the 12V battery in the transmitter and try again. If the LED lights up but the remote control will not operate the lift, you may need to reprogram the transmitter.

Remote Operation (SEE GUIDE BELOW)

Note: The lift can still be operated with the key switch even if the remote fob is locked.



Allow motor to stop before reversing directions.



Remote Guide

Press the  to move the lift up.

Press the  to move the lift down.


Press the  to turn the canopy light on.

Press the  and  to lock and unlock your lift.



REMOTE CONTROL REPROGRAMMING INSTRUCTIONS

To reprogram remotes follow below instructions.

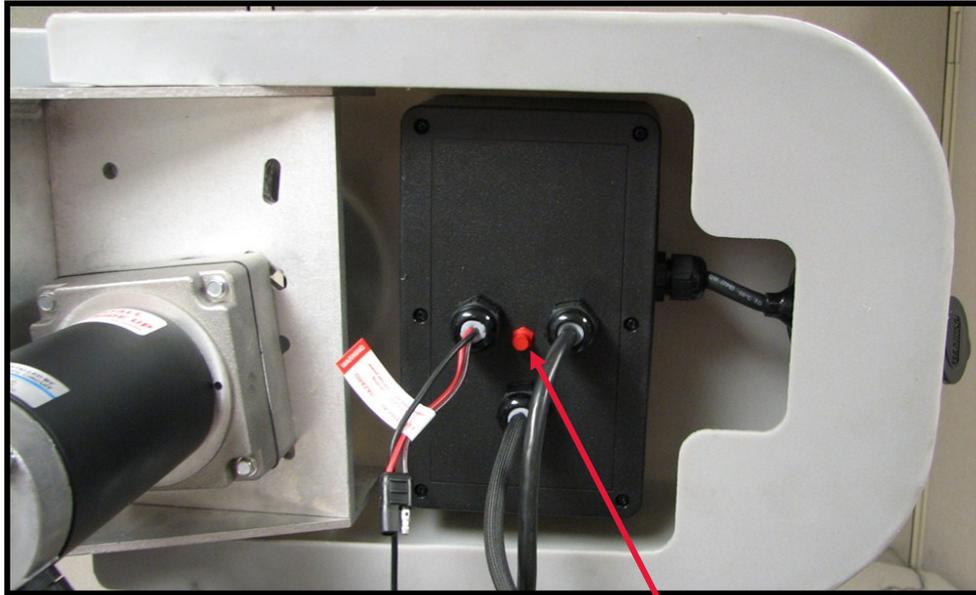

Step 1 - Hold down (A) for 5 seconds.

Step 2 - Hold down (B)  button for 3 seconds.

Step 3 - For second remote immediately after first remote has been reprogrammed hold down (A) again for 5 seconds and then hold down (B)  on second remote for 3 seconds. Both remotes should now work. If not repeat process and make sure to do second remote right after first.

- Verify the battery in the remote fob has charge. If the remote fob has a low battery, there will be a symbol on the remote fob screen. When you install a new battery in the remote fob, you will hear a series of tones.

- Verify the battery or power to unit is connected properly.

- Reprogram the remote fobs per instructions above. Verify that both remote fobs work.



Remote Guide

Press the  to move the lift up.

Press the  to move the lift down.

Press the  to turn the canopy light on.

Press the  and  to lock and unlock your lift.



TROUBLE SHOOTING

Problem:

Remote Fob does not work.

Motor does not work.

Solution:

Check to see if the remote works. Press the up or down button. If the remote works you should see the display screen light up. If remote display does not light up, replace the battery and try again. If the remote works for a few seconds and stops replace the batteries.

Check to see if the lift will operate with the key switch. If the lift does not work with the key switch, check to make sure the battery is fully charged on a 12v Sidewinder™ or that you have power if you have a 110v Sidewinder™. To check for power on a 110v Sidewinder™ check the GFCI. It should have a light on it, if not; try resetting the GFCI. If you do not have power consult an electrician.

If lift works with key switch but not the remote try reprogramming the remotes (instructions on previous page).

If you have power but the fob and key switch do not work you might need a new circuit board or motor. Consult your local ShoreMaster® dealer for repair.

Make sure you have power to the unit.

If you have an 110v Sidewinder™, try resetting the GFCI by pressing the reset button on the GFCI. On a 12v Sidewinder™ make sure your battery is fully charged.

The brushes in the motor could be bad. Consult local ShoreMaster® dealer on how to check your brushes.